

**Handheld Thermometer
Instruction Manual
HR-1100/HR-1200/HR-1300 Series**

AE-100288

Fourth edition (Jun. 2023)

Anritsu Meter Co., Ltd.



2-4-5, Shimomeguro, Meguro-ku, Tokyo, 153-0064, Japan


TEL: +81-3-3491-9181

FAX: +81-3-3493-6729

Safety information

To safely operate and service the thermometer and to prevent any product damage and/or maintain the precise temperature measurement results, please carefully follow the instructions below:

Caution

- Do not use this product for any purpose other than taking temperature measurements.
- If any abnormalities are found, immediately stop using the product.
- Do not disassemble or modify the product.
- Do not use any power supply other than commercially available dry batteries and/or a dedicated adaptor.
- Insert the batteries in the correct manner (pole+ to pole+).
- Remove the batteries when depleted or when the product is not expected to be used for an extended period of time.
- Do not mix old and new batteries or batteries of different makes or types.
- When using the alarm and analog output with battery power, do not use the battery level “  ” (indicator display).
-

Warning

- Do not throw into an open fire. Do not short circuit, disassemble, or heat.
- Do not recharge the batteries at any time.
- To prevent electric shock, do not touch the metal parts or terminals of the probe cable or analog output cable during measurement.
- To prevent electric shock, if the probe is still in contact with the voltage application part even when the power is turned off, disconnect the probe before setting the analog output cable or device.

※ When measuring under the influence of high voltage and high frequency, there is a risk of electric shock and measurement failure, so please contact us.

Introduction

Thank you very much for purchasing this Anritsu Meter product.

This instruction manual has been carefully prepared to ensure that the product can be used safely and securely.

Please carefully and thoroughly read this instruction manual, fully understand all the individual functions, and use the product properly.

Should you have any unclear issues or questions while operating the product, please refer to this instruction manual.

Notes

- The contents of this document and/or product specifications are subject to change without prior notice.
- Unauthorized reproduction of any part of this document is strictly prohibited.
- This instruction manual has been prepared with absolute care. Please free feel to contact our company or your retailer should you discover any omissions or mistakes.
- In no event is Anritsu Meter liable to anyone for any indirect, special, or consequential damages as a result of using this product.

Warranty and After-sales Service

● Warranty

This product has been submitted to strict tests and inspections prior to delivery. Anritsu Meter warrants this product to be free from defects in material and workmanship for a period of one (1) year from date of delivery. Should any failures arise due to defects during manufacture or accidents during transportation, please contact our company or your retailer. For any failures during the warranty period which are deemed our responsibility, we will exchange the necessary parts or carry out repairs at no cost.

However, the warranty will be considered to be voided (i.e., the customer pays for repairs) in the following cases:

- Failure due to a fire, earthquake, or any other force majeure.

- Failure due to misuse, abuse, and/or modification. (Please note that if the case of the product is opened or the screws are loosened, such an act will be regarded as a modification.)

Note: Our thermocouple probes are consumables and are not covered by the warranty.

- **After-sales Service**

- If you think the product is not correctly working, please refer to this instruction manual. Should any issue persist, please contact our company or your retailer.

- Repairs during the warranty period are subject to the content of the warranty sheet. However, only when used in Japan. Repairs after the warranty period has elapsed will be carried out only if such repairs recover and maintain the product functions.

- If there is a need to return the product for repair or calibration, please pack it in the original packaging that was used for delivery. If such packaging is not available, please enclose the product with sufficient cushioning material and return the product in a condition where no damage can be caused.

Table of Contents

1. General	1
2. Unpacking	1
2.1. Unpacking.....	1
2.2. Repacking	1
3. Name and Explanation of Each Part	2
3.1. External View	2
3.2. LCD Display	3
4. Preparations Before Taking Measurements	4
4.1. How to Install the Batteries.....	4
4.2. How to Use the Hand Strap	4
4.3. How to Use the AC Power Supply [Applicable Models: HR-13** Series] .	5
4.4. How to Set the Probe.....	6
4.5. How to Use the Soft Case.....	6
5. Operations and Functions	7
5.1. Power ON/OFF	8
5.2. HOLD Function.....	8
5.3. Automatic Power OFF Function	9
5.4. Resolution Change [Applicable Models: HR-12*0/HR-13*0]	9
5.5. P/V Hold Function [Applicable Models: HR-12*0/HR-13*0]	10
5.6. Turning the Backlight ON/OFF [Applicable Models: HR-12*0/HR-13*0]	10
5.7. Calibration Function [Applicable Model: HR-13*0]	11
5.8. Alarm Function [Applicable Model: HR-13*0].....	12
6. Analog Output [Applicable Model: HR-13*1]	15
6.1. Turning the Analog Output ON/OFF.....	16
7. Retention of Setup Data	17
8. Checking the Remaining Battery	17
9. Error Messages	18
9.1. Indication of a Broken Element of the Probe.....	18
9.2. Overrange Indication	18
9.3. Battery Voltage Drop Indication.....	18
10. Maintenance	19
10.1. Storage.....	19
10.2. When the Case of the Instrument Gets Dirty.....	19
11. Troubleshooting: Before Contacting Support	20

12. HR Series Specifications.....	21
-----------------------------------	----

1. General

This product is a handheld thermometer for high precision, reliability, and usability. It has a high-precision analog technology and a microcomputer to digitally correct measured data, making highly stable and high-precision temperature measuring possible.

2. Unpacking

2.1. Unpacking

Please check if the following items are present when unpacking. We make sure all items are carefully packed, but should you find any missing or failed items, please contact our company or your retailer.

Item	Q'ty	Applicable model
Main unit	1	All models
Soft case	1	All models
Hand strap	1	All models
Analog output cable	1	HR-13*1
Alarm output cable	1	HR-13**
Alkaline AA battery	4	All models
Instruction manual	1	All models
Test report	1	All models
Warranty sheet	1	All models
User registration sheet	1	All models


2.2. Repacking

To move this instrument (such as transportation by car), pack it in its original packaging. If such packaging is not available, fully protect the instrument with shock-absorbing material (Styrofoam, etc.). Please note that if packing materials generate dust or moisture, the instrument may become damaged. Please use dry packing materials that do not generate dust.

3. Name and Explanation of Each Part


3.1. External View

(HR-1301)

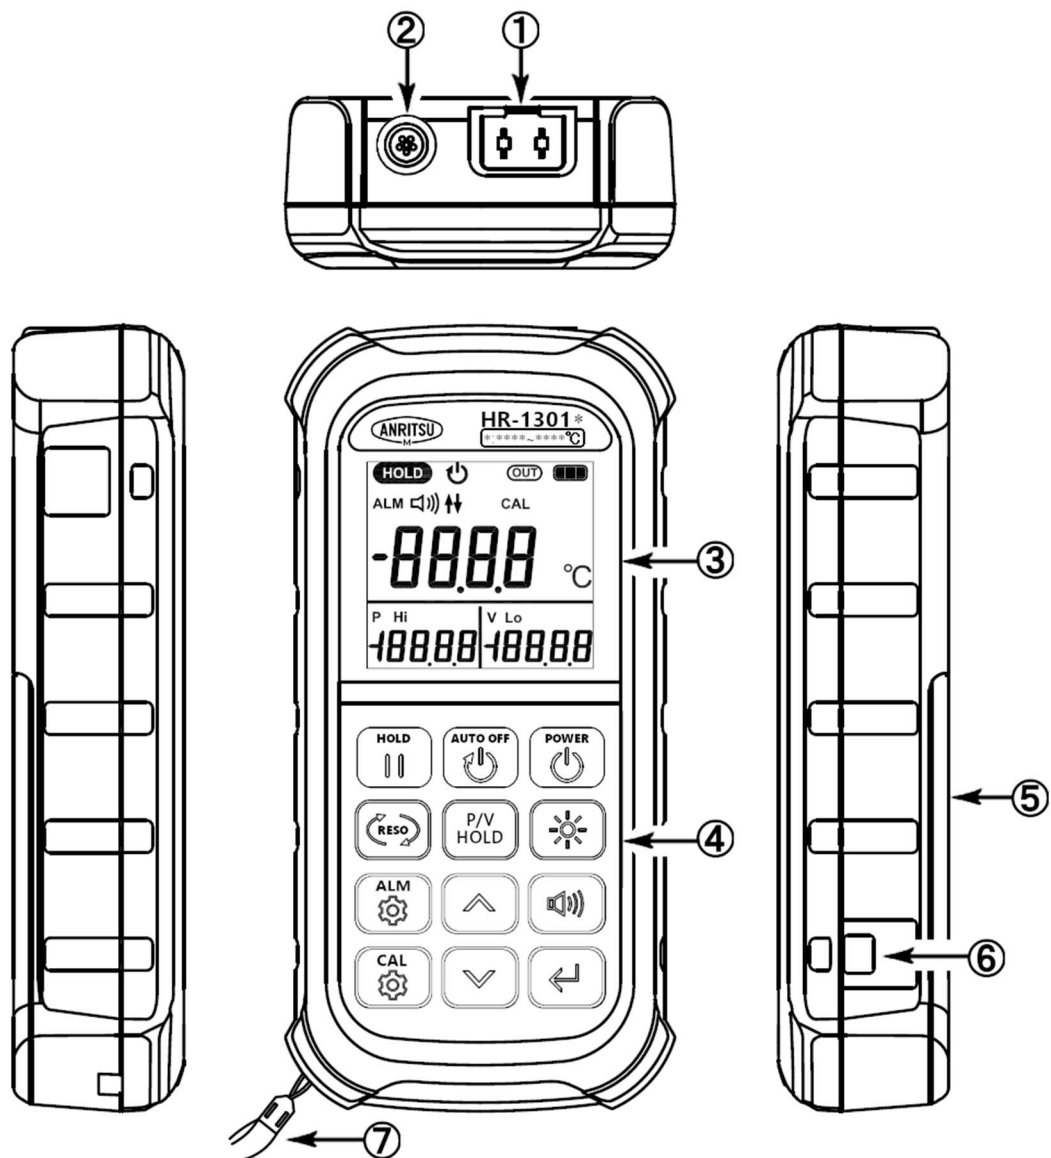

- ① Probe input connector
- ② Alarm output connector/Analog output connector
- ③ LCD display
- ④ Key switch panel
- ⑤ Battery housing
- ⑥ AC adaptor jack
- ⑦ Hand strap

3.2. LCD Display

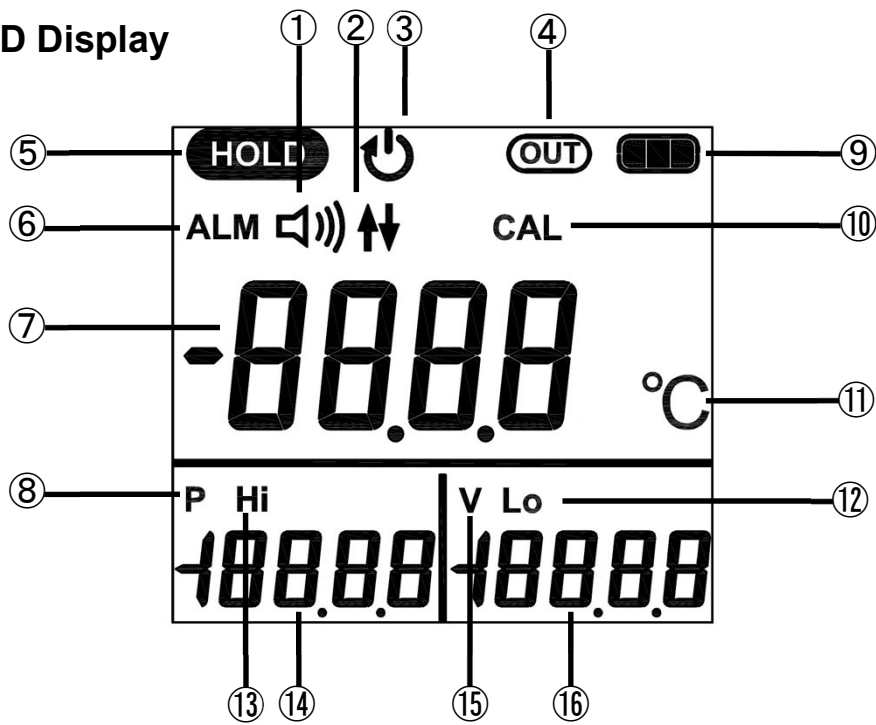


	Description	HR-11*0	HR-12*0	HR-13*0	HR-13*1
①	ALM_BZ segment			•	•
②	↑↓ segment			•	•
③	A-OFF segment	•	•	•	•
④	Analog output segment				•
⑤	HOLD segment	•	•	•	•
⑥	ALM segment			•	•
⑦	Main display	•	•	•	•
⑧	P segment		•	•	•
⑨	Battery segment	•	•	•	•
⑩	CAL segment			•	•
⑪	°C segment	•	•	•	•
⑫	Lo segment			•	•
⑬	Hi segment			•	•
⑭	Sub display 1		•	•	•
⑮	V segment		•	•	•
⑯	Sub display 2		•	•	•


4. Preparations Before Taking Measurements

4.1. How to Install the Batteries


Make sure to turn the power off when replacing batteries.

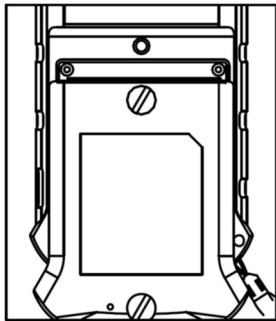


- (1) Loosen both screws and open the cover of the battery housing.

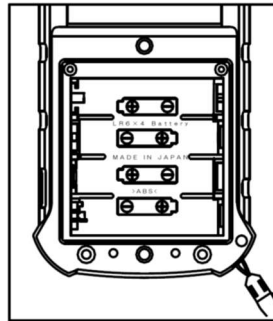

- (2) Pay attention to the orientation of the batteries.

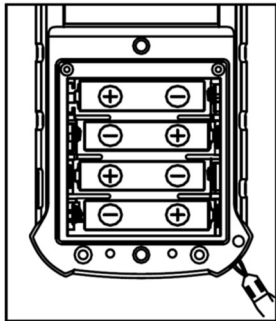

- (3) Install the batteries.

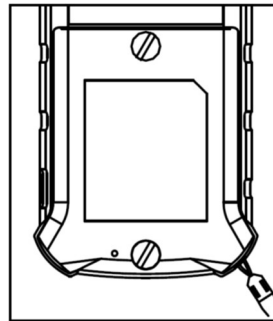

- (4) Reattach the battery housing cover, tighten both screws, and then press the edge of the cover to secure it.


Note: To maintain the waterproofing performance, firmly tighten the screws on the battery cover.

Applicable models: HR-11*0/HR-12*0

4.2. How to Use the Hand Strap


Place the enclosed hand strap on your wrist to prevent the instrument from dropping.

Loop the thin cord of the strap through the hole and then pull the other end of the hand strap through that loop.

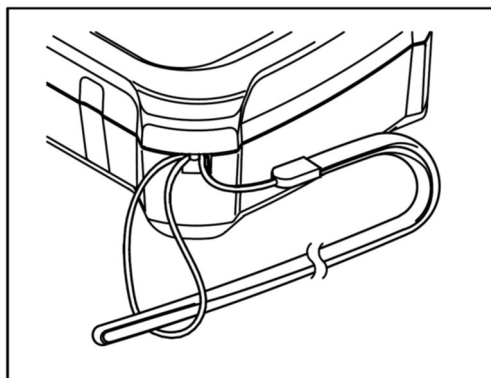

4.3. How to Use the AC Power Supply [Applicable Models: HR-13** Series]


- (1) Turn off the power of the instrument and then connect the connection plug of the AC adaptor to the main unit as follows:

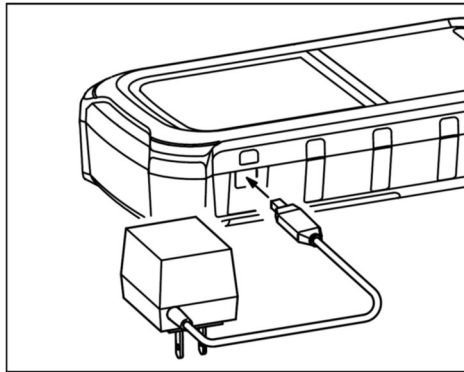

- (2) Connect the power plug of the AC adaptor to an AC mains (100 VAC).
Note: The AC adaptor is available as an option. Please use one as specified by Anritsu Meter.

4.4. How to Set the Probe

Set the probe to the main unit as shown in the illustration below. It is designed so that if the probe orientation is incorrect, it cannot be fully inserted. If the probe is forcefully inserted, failure may result. Please check the probe's orientation before inserting it.

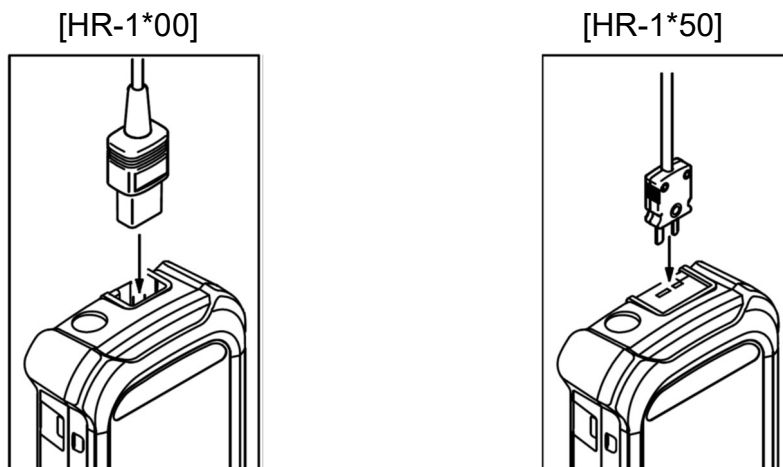

4.5. How to Use the Soft Case

To protect the instrument from dirt or scratches, etc., use the attached soft case.

When using an AC adaptor, alarm output, and/or analog output, open a hole at the relevant position on the soft case by using scissors or a similar object.


5. Operations and Functions

This instruction manual covers the HR-1100 Series, the HR-1200 Series, and the HR-1300 Series. Depending on the model purchased, some functions may not be available. Please refer to the table below.

Table of functions supported by individual series

Function	HR-11*0	HR-12*0	HR-13*0	HR-13*1
Power ON/OFF	●	●	●	●
Hold	●	●	●	●
Automatic power OFF	●	●	●	●
Resolution change		●	●	●
P/V hold		●	●	●
Backlight		●	●	●
Calibration			●	●
Alarm			●	●
Analog output				●
Waterproofing function (equivalent to IPX5)	●	●		


Note: About analog output

- 1 mV/°C and 10 mV/°C can be switched using the resolution change.
- The factory setting is “enabled” (outputting). As this setting increases battery consumption, it is recommended to turn the analog output off when not in use.
- When using the analog output with battery power, do not use the battery level “  ” (indicator display).


5.1. Power ON/OFF

Pressing the **POWER** key will illuminate all the indicators for about three seconds and start the measurements.

Press the **POWER** key again to turn the instrument off.

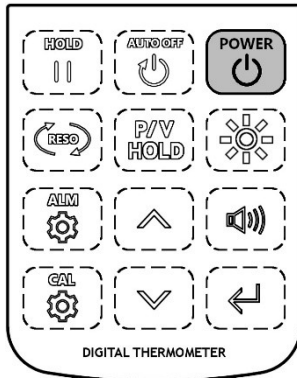

All illuminated (HR-1300)

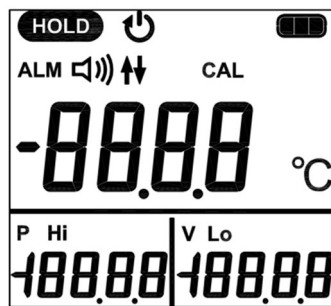


Normal measurement




5.2. HOLD Function

Press the **HOLD** key to maintain the indicated values during measurements. **HOLD** will illuminate on the screen while **HOLD** is on. To release the **HOLD** function, press the **HOLD** key again.

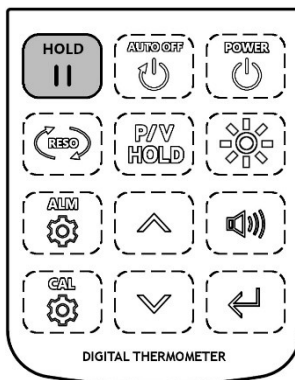


HOLD illuminated

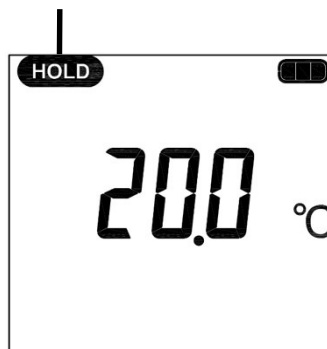


5.3. Automatic Power OFF Function

When the **AUTO OFF** key is pressed, “AUTO OFF” symbol will illuminate on the screen. If no key operation is performed for a certain period of time (about five minutes), the power will automatically be turned off, preventing the unit from remaining turned on. To release the Automatic Power OFF function, press the **AUTO OFF** key again.

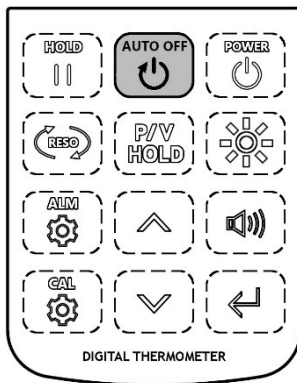


“AUTO OFF” symbol illuminates

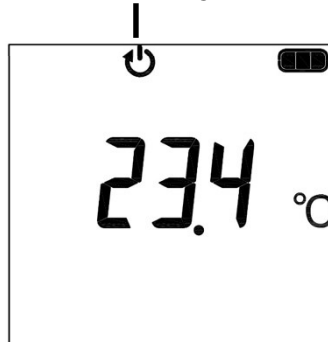

5.4. Resolution Change [Applicable Models: HR-12*0/HR-13**]

Press the **RESO** key to switch the resolution.


- 0.1°C resolution indication: A range between -104.9 and 504.9°C is displayed with a 0.1°C resolution. If a temperature is out of this range, the instrument will automatically indicate it at a 1°C resolution.
- 1°C resolution indication: The 1°C resolution is applied to all temperatures.

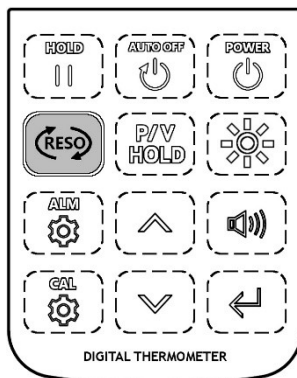


0.1°C resolution indication



1°C resolution indication

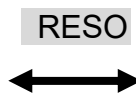

5.5. P/V Hold Function [Applicable Models: HR-12*0/HR-13**]

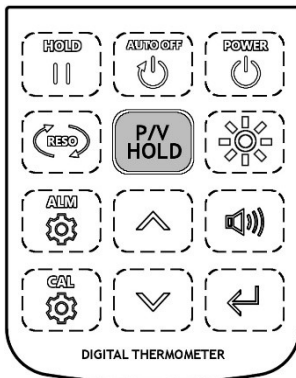


Press the **P/V-HOLD** key to enter the P/V Hold function. The lowest and highest values will be displayed in the sub-screens. Press the **P/V-HOLD** again to return to normal measurements.

Normal measurement



P/V mode

P/V-HOLD

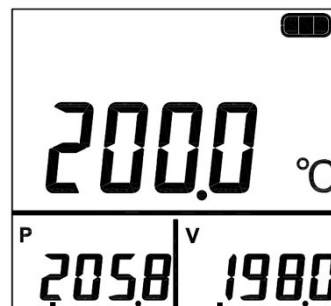




Current
temperature

Max.
value

Min.
value

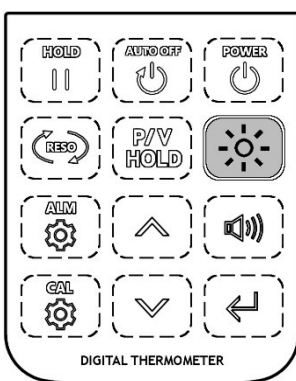5.6. Turning the Backlight ON/OFF [Applicable Models: HR-12*0/HR-13**]





Press the  key to turn on the backlight so that indications on the screen can be seen in dark places. Press the  key again to turn off the backlight.

Note: When the backlight is ON, more battery usage will be incurred. Don't forget to turn it off.

5.7. Calibration Function [Applicable Model: HR-13**]

The calibration function offsets-compensates the measured data.

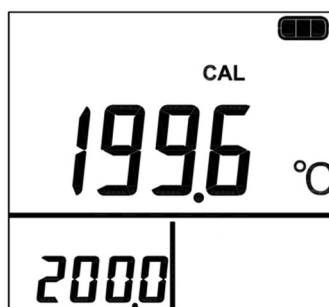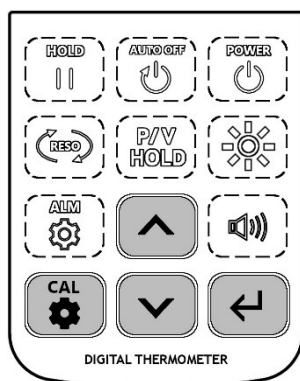

(1) Calibration settings

- (i) Make the probe contact the object of measurement, and when the indication becomes stable, press the CAL key.

Note: When the CAL key is pressed, the calibrated temperature first shown is a value that is calculated by adding the offset value that was set last time to the current temperature.

In the above case, the last offset value is +0.4°C.

- (ii) Use the ▲ and ▼ keys to set up a calibration value (sub-screens) to a desired temperature.

Note: The setting range with the ▲ and ▼ keys are limited within $\pm 10^{\circ}\text{C}$ of measured values.

- (iii) Press the ENTER key to complete the setting and automatically return to the calibration mode.

Pressing the CAL key before pressing the ENTER key will interrupt the setup process and the normal mode will resume.


(2) Calibration mode



During calibration mode, "CAL" is displayed on the screen. In the main display, a value calculated by adding the offset value to the current temperature is displayed.

In the case of the image on the left, the current temperature is 199.6°C, and the offset value is +0.4°C.

(3) Releasing the calibration mode

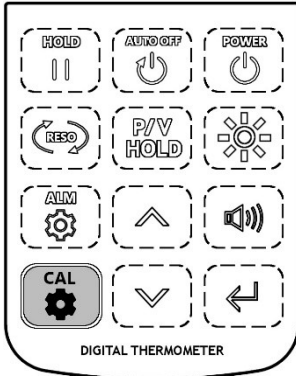

To release the calibration mode, press the CAL key twice.


5.8. Alarm Function [Applicable Model: HR-13]**





The alarm function indicates data abnormalities when measured data go out of the setup range (upper and lower limits.) For every measurement, the alarm function is turned on. When an abnormality is detected, a mark to indicate the abnormality is shown at the top of the screen.

Measured data status	Mark indicating abnormality
Upper limit \leq Measured data	ALM ↑
Lower limit \geq Measured data	ALM ↓
Within upper/lower limits of alarm	None

(1) Setting of upper/lower limits of alarm

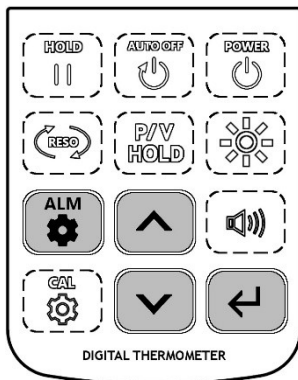

(i) When the ALM key is pressed, the setting screens are switched in order as follows. Display the desired screen to make changes.

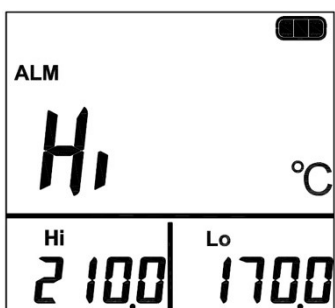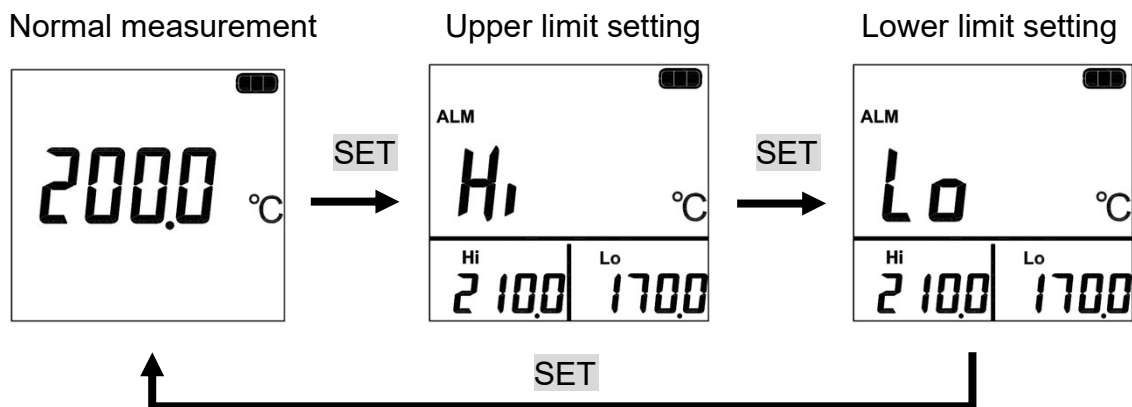


(ii) Change the numerical value with the **▲** and **▼** keys. Press and hold the **▲** and **▼** keys to increase the rate of change by 10 and 100 times.

(iii) Press the **ENTER** key to make new settings effective. If the **ALM** key is pressed before pressing the **ENTER** key, new setups are canceled.

(2) Turning buzzer sound ON/OFF


When the **ALM** key is pressed, "ALM" and **ALM** will illuminate on the screen. When abnormal data is detected, the buzzer sound is outputted. Press the **ALM** key again to turn the buzzer sound output off.

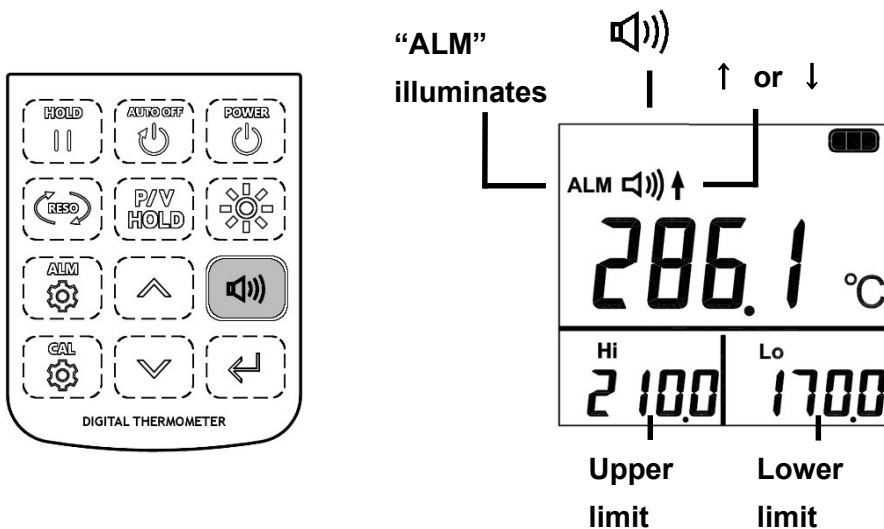

(3) External outputs

(i) Signal name and pin assignments

Pin #	Signal
1	ALM1 (upper limit)
2	ALM1 (upper limit)
3	ALM2 (lower limit)
4	ALM2 (lower limit)

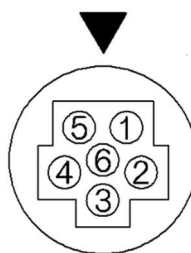

Note: Dedicated cable: ALMHA-1.5

(ii) Output signals

It compares the current temperature with the alarm set value and outputs the contacts as shown in the table below.

Measurement data status	Upper limit alarm	Lower limit alarm
Higher than upper limit	Close	Open
Within upper and lower limits	Open	Open
Lower than lower limit	Open	Close


Note: The alarm output uses a photo MOS relay.

ON resistance (internal protection resistance 400Ω, photo MOS relay


ON resistance 50Ω)

Drive voltage MAX.25V

(iii) Example of connection

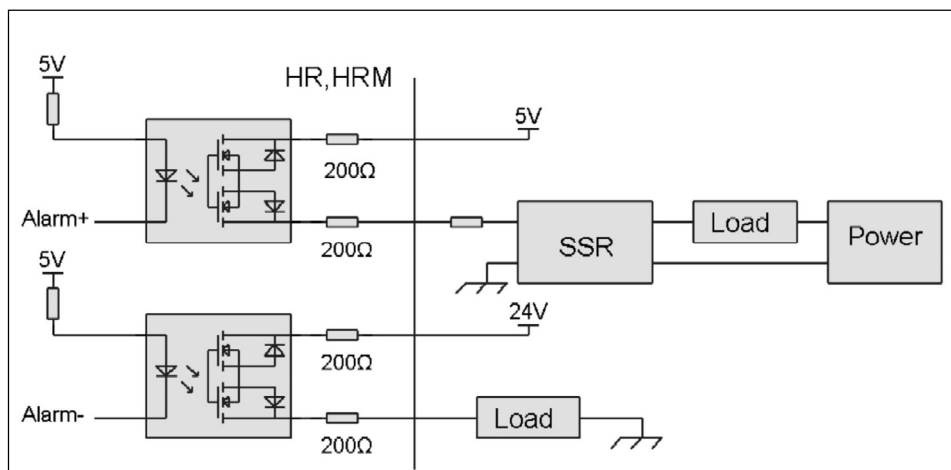

Note: Make sure to turn the power off before connecting/disconnecting the instrument to other equipment.

Note: When using the alarm output with battery power, do not use the battery level “  ” (indicator display).


6. Analog Output [Applicable Model: HR-13*1]

Analog output has two output rates. Press the **RESO** key to switch the output rates. When the analog output segment is illuminating/flashing, the output is always active.

Illuminating: 10 mV/°C

Flashing: 1 mV/°C

Output rate	Output range
1 mV/°C	All measurement range with a 1°C resolution
10 mV/°C	Measurement range of -100 to 500°C with a 0.1°C resolution

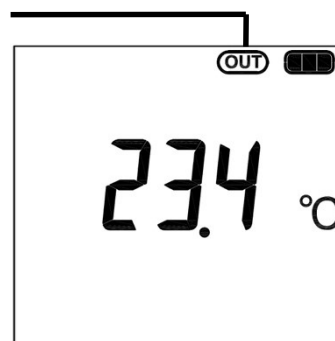

Note: No automatic output rate switching with the temperature range

In overrange or when the sensor element is broken (burnout), the analog output is fixed as follows:


Higher than the upper limit: About 5,100 mV

Lower than the lower limit: About -2,200 mV

Burnout: About -2,300 mV

Signals and pin assignments

Pin #	Signal
5	+
6	-

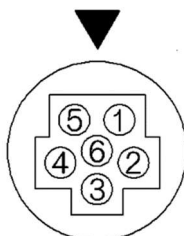

(Dedicated cable: ANGHA-1.5)

How to connect the recorder

- (1) Turn the power of the recorder and the instrument OFF.
- (2) Connect the red terminal of the analog output cable to the [+] terminal of the recorder and the black terminal to the [-] terminal of the recorder.
- (3) Align the input range of the recorder with the measurement range of the instrument.
- (4) Turn the power of the recorder and the instrument ON.
- (5) Make sure that the Automatic Power OFF function is released. If not, press the AUTO OFF key once to release it.

Caution : Never short-circuit cable terminals . Doing so may result in a failure of the instrument.


Warning : To prevent electric shock, if the sensor is still in contact with the voltage application part even when the power is off, disconnect the sensor before setting the analog output cable and equipment.

Do not touch the metal part or terminal part of the sensor cable or analog output cable during measurement.

Note: When measuring under the influence of high voltage and high frequency, there is a risk of electric shock and measurement failure, so please contact us.

Note: The sensor input and analog output are isolated, but they are connected by a capacitor to reduce output noise.


(Leakage current 0.5mA or less in AC500V withstand voltage test)

Note: When using the alarm and analog output with battery power, do not use the battery level “  ” (indicator display).

6.1. Turning the Analog Output ON/OFF



To turn the analog output ON/OFF, turn the power of the instrument off. Then press the **RESO** key and **POWER** keys at the same time to turn the instrument ON.

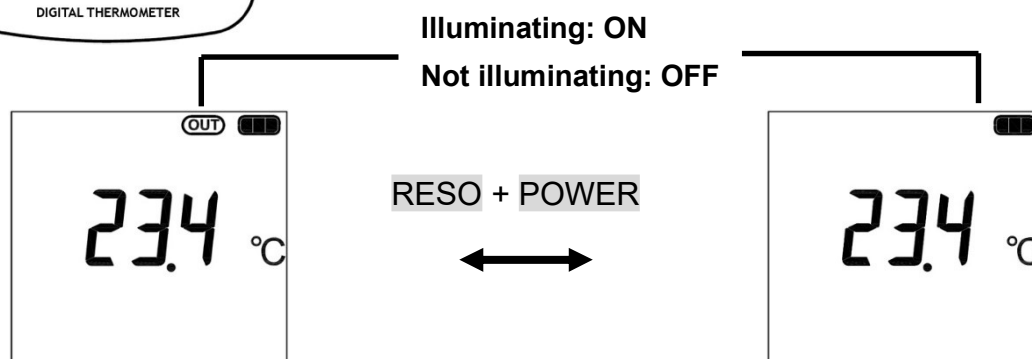

Notes:

- Factory setting is [ON].
- While the analog output is ON, more battery usage will be incurred. Don't forget to turn it off.

7. Retention of Setup Data


Some settings will be released when the batteries are exchanged or when the instrument is turned off. Please check the details in the following table:


Function	
HOLD	Released
Automatic power OFF	Retained
P/V hold	Released
Resolution/Analog output rate	Retained
Backlight	Released
Alarm setting	Retained
Alarm output buzzer ON/OFF	Released
Calibration setting	Retained
Calibration ON/OFF	Retained
Analog output ON/OFF	Retained

8. Checking the Remaining Battery

Remaining battery is displayed in the top right corner of the indication.


As properties vary, depending on batteries, use this value only as a reference.

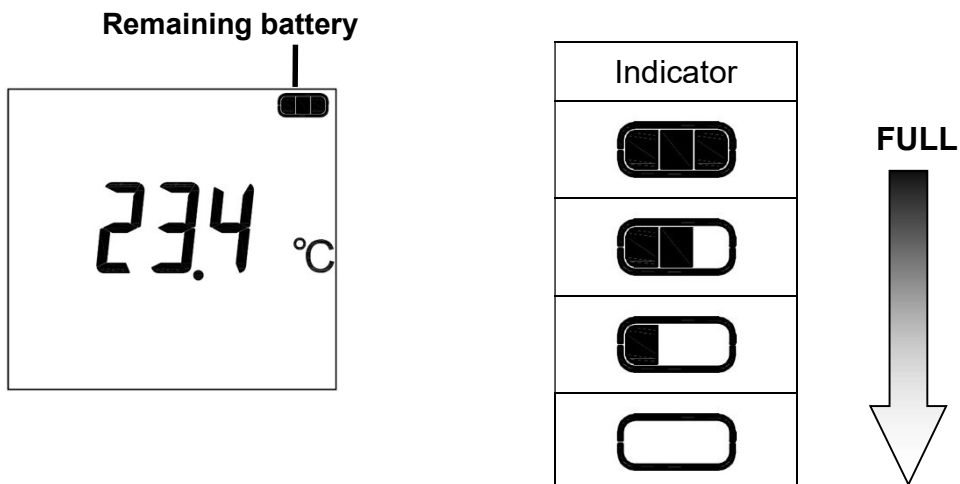

When the indication of the indicator becomes , replace the batteries with new ones.


9. Error Messages

9.1. Indication of a Broken Element of the Probe

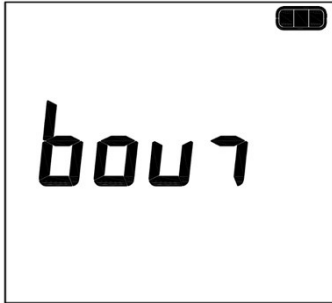


If the probe has a broken element or is disconnected, the burnout (broken element) indication is displayed. If this indication is displayed, replace the probe with a new one or connect the probe.

9.2. Overrange Indication

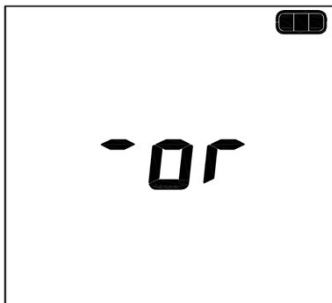


When the temperature in measurement exceeds the measurable range, the overrange indication is displayed. If the element of the probe is about to become broken, this overrange indication may be shown. If it is clear that the temperature in measurement is within the measurable range, check the probe.

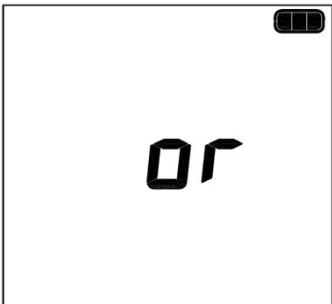

Even if the overrange indication is shown, it will not damage the instrument. However, the probe may be consumed, so relocate it to a place where the temperature is at a heat-resistant temperature or a lower temperature.

9.3. Battery Voltage Drop Indication



When batteries are depleted and the battery indication on the screen becomes , replace the batteries with new ones.

10. Maintenance

10.1. Storage

When storing the instrument, avoid the following places:

- In direct sunlight
- Subject to heavy vibrations
- High humidity (85%RH or more)
- High temperature atmosphere (50°C or higher)
- Filled with dust, waste, corrosive gas, and/or salt
- High electromagnetic field


To store the instrument for a long time, it is recommended to remove the batteries and store the unit in the original packaging at time of delivery.

10.2. When the Case of the Instrument Gets Dirty

When the case of the instrument gets dirty, please wipe it with a slightly damp cloth. Do not use alcohol, thinner, benzine, or other chemicals. Otherwise, the case or keyboard may become discolored or deformed.

* About waterproofing [Applicable models: HR-11*0/HR-12*0]

The simple water resistance specifications of this product are equivalent to IPX5. It can be washed with a small amount of water. However, do not directly spray water on the air hole near the battery housing.

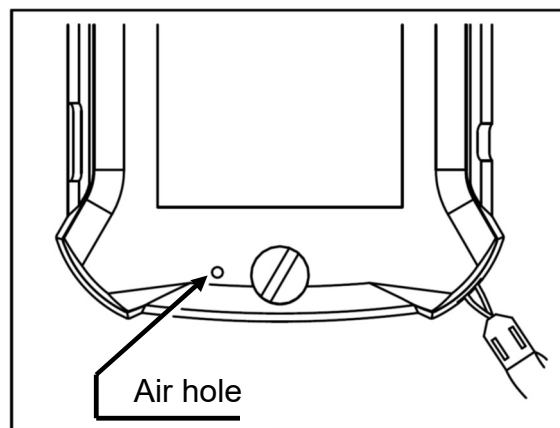

11. Troubleshooting: Before Contacting Support

If you find any abnormalities or become unable to operate the instrument, first check for the following items. If you still cannot solve the issue, please contact your retailer or our company.

(1) The instrument does not operate when power is turned on:

- Is the orientation of the batteries in the correct manner?

Reset the batteries.

- Have the batteries been depleted?

Install new batteries.

(2) The indicated values of temperature are unstable:

- Is the element of the probe almost broken or is the probe deformed?

Do an appearance check of the probe.

- Is the probe connector inserted fully?

Re-insert the connector.

- Is the probe sufficiently making contact with the object of measurements?

Change how to set the probe.

- Is the measurement environment in a high electromagnetic field (such as a large motor)?

- Relocate the instrument or use the shield.

(3) If measurement errors are too large:

- Are the thermocouple types of the probe and the instrument the same?

Replace the probe.

- Is the head of the probe deformed?

Replace it with a new one.

(4) Keys are not responding:

- Is there any burn out (broken element) indication shown?

Set the probe.

- Are any functions running?

Terminate various functions and retry to operate the keys.

12. HR Series Specifications

ASP specifications (common)

Model (HR-)		1100, 1200, 1300, 1301, 1400, 1500	
Operation switches		Membrane keyboard (with clicking function)	
Input connector		ASP connector (thermocouple homogeneous metals)	
Input		Thermocouple Type E or K	
No. of input		One	
Signal source resistance		1 k Ω or less	
Measurement range	1 $^{\circ}$ C resolution	E	-200 to 800 $^{\circ}$ C
		K	-200 to 1370 $^{\circ}$ C
	0.1 $^{\circ}$ C resolution	E	-104.9 to 504.9 $^{\circ}$ C
		K	-104.9 to 504.9 $^{\circ}$ C
Measurement accuracy	1 $^{\circ}$ C resolution	Less than 0 $^{\circ}$ C	$\pm (0.5\% \times \text{indicated value} + 1^{\circ}\text{C})$
		0 $^{\circ}$ C or more	$\pm (0.1\% \times \text{indicated value} + 1^{\circ}\text{C})$
	0.1 $^{\circ}$ C resolution	Less than 0.0 $^{\circ}$ C	$\pm (0.15\% \times \text{indicated value} + 0.2^{\circ}\text{C})$
		0.0 $^{\circ}$ C or more	$\pm (0.05\% \times \text{indicated value} + 0.2^{\circ}\text{C})$
Accuracy of reference junction compensation		$\pm 0.2^{\circ}\text{C}$ (at 25 $^{\circ}\text{C} \pm 10^{\circ}\text{C}$)	
Temperature coefficient (Only when exceeding 25 $^{\circ}\text{C} \pm 10^{\circ}\text{C}$)		$\pm 0.02 \times \Delta t^{\circ}\text{C}$ (Exceeded temperature Δt is multiplied by the coefficient and then added to the indication tolerance (measurement accuracy + accuracy of the reference junction compensation)) Ex. @50 $^{\circ}\text{C}$ or 0 $^{\circ}\text{C}$ environment: $\pm 0.3^{\circ}\text{C}$ added	
Operational conditions		0 to 50 $^{\circ}\text{C}$, within 0 to 80% RH (no condensation)	
Storage conditions		-20 to 50 $^{\circ}\text{C}$, within 0 to 85% RH (no condensation)	
Sampling frequency		About 200 ms	
Linearizer method		Digital linearizer method (compliant with JIS C 1602-2015)	
Dimensions		82.1 \times 166 \times 36 mm (W \times H \times D) (Excluding connector extrusion)	
Weight		About 350 g (including batteries)	
Analog output		See specifications (analog output)	

Alarm output	See specifications (alarm output)
Memory function	See specifications (memory function)
Power supply	See specifications (power supply)
Accessories	See specifications (accessories)
Conformity standards (CE)	EMC: EN61326-1: 2013 EN 61326-2-1: 2013 class A Table2 (Industrial) RoHS: IEC EN 63000:2018

ANP specifications (common)

Model (HR-)		1150, 1250, 1350, 1351, 1450, 1550	
Operation switches		Membrane keyboard (with clicking function)	
Input connector		ANP connector (thermocouple homogeneous metals)	
Input		Thermocouple Type E or K	
No. of input		One	
Signal source resistance		1 k Ω or less	
Measurement range	1 $^{\circ}$ C resolution	E	-200 to 800 $^{\circ}$ C
		K	-200 to 1370 $^{\circ}$ C
	0.1 $^{\circ}$ C resolution	E	-104.9 to 504.9 $^{\circ}$ C
		K	-104.9 to 504.9 $^{\circ}$ C
Measurement accuracy	1 $^{\circ}$ C resolution	Less than 0 $^{\circ}$ C	$\pm (0.5\% \times \text{indicated value} + 1^{\circ}\text{C})$
		0 $^{\circ}$ C or more	$\pm (0.1\% \times \text{indicated value} + 1^{\circ}\text{C})$
	0.1 $^{\circ}$ C resolution	Less than 0.0 $^{\circ}$ C	$\pm (0.15\% \times \text{indicated value} + 0.2^{\circ}\text{C})$
		0.0 $^{\circ}$ C or more	$\pm (0.05\% \times \text{indicated value} + 0.2^{\circ}\text{C})$
Accuracy of reference junction compensation		$\pm 0.2^{\circ}\text{C}$ (at 25 $^{\circ}\text{C} \pm 10^{\circ}\text{C}$)	
Temperature coefficient (Only when exceeding 25 $^{\circ}\text{C} \pm 10^{\circ}\text{C}$)		$\pm 0.03 \times \Delta t^{\circ}\text{C}$ (Exceeded temperature Δt is multiplied by the coefficient and then added to the indication tolerance (measurement accuracy + accuracy of the reference junction compensation) Ex. @50 $^{\circ}\text{C}$ or 0 $^{\circ}\text{C}$ environment: $\pm 0.5^{\circ}\text{C}$ added	
Operational conditions		0 to 50 $^{\circ}\text{C}$, within 0 to 80% RH (no condensation)	
Storage conditions		-20 to 50 $^{\circ}\text{C}$, within 0 to 85% RH (no condensation)	
Sampling frequency		About 200 ms	
Linearizer method		Digital linearizer method (compliant with JIS C 1602-2015)	
Dimensions		82.1 \times 166 \times 36 mm (W \times H \times D) (Excluding connector extrusion)	
Weight		About 350 g (including batteries)	
Analog output		See specifications (analog output)	
Alarm output		See specifications (alarm output)	
Memory function		See specifications (memory function)	

Power supply	See specifications (power supply)
Accessories	See specifications (accessories)
Conformity standards (CE)	EMC: EN61326-1: 2013 EN 61326-2-1: 2013 class A Table2 (Industrial) RoHS: IEC EN 63000: 2018

* About the tolerance

The indication tolerance on the main unit of the thermometer is calculated as “measurement accuracy + accuracy of reference junction compensation”. However, this product is manufactured by customizing the reference junction compensation section for individual products. For this reason, the acceptance-rejection criterion at the time of shipment does not take the accuracy of the reference junction compensation into account and makes judgment for the measurement accuracy only. (This will narrow tolerance.)

For actual use, please calculate the indication tolerance with the formula: measurement accuracy + accuracy of reference junction compensation.

If the value exceeds $25^{\circ}\text{C} \pm 10^{\circ}\text{C}$, the formula will be: measurement accuracy + accuracy of reference junction compensation + temperature coefficient.

Specifications (analog output) HR-13*1

Output rate (to be switched by indication resolution)	1 mV/°C (1°C resolution)	10 mV/°C (0.1°C resolution)
Output range	Full range @1°C resolution measurements	Full range @0.1°C resolution measurements
Analog output conversion accuracy (under the 25°C±10°C environment)	Add equivalent to ±1°C (1 mV) to measurement accuracy	Add equivalent to ±0.1°C (1 mV) to measurement accuracy
Temperature coefficient (When exceeding 25°C±10°C, exceeded temperature Δt°C is multiplied by the coefficient and then added to the analog output conversion accuracy)	± (0.1 mV/°C × Δt°C) Ex. @50°C or 0°C environment: ± 1.5 mV (equivalent to 2°C)	± (0.1 mV/°C × Δt°C) Ex. @50°C or 0°C environment: ± 1.5 mV (equivalent to 0.2°C)
When the probe disconnected	About -2.3 V	
Out of measurement range (+)	About 5.1 V	
Out of measurement range (-)	About -2.2 V	
Insulation	Insulation resistance	100 MΩ/500 VDC (Between probe input and analog output)
	Rated working voltage	300Vp-p (Between probe input and analog output)
Cable		ANGHA-1.5

Warning

- To prevent electric shock, if the probe is still in contact with the voltage application part even when the power is off, disconnect the probe before setting the analog output cable and equipment.
- Do not touch the metal part or terminal part of the probe cable or analog output cable during measurement.

* When measuring under the influence of high voltage and high frequency, there is a risk of electric shock and measurement failure, so please contact us.

* The probe input and analog output are isolated, but they are connected by a capacitor to reduce output noise.

(Leakage current 0.5mA or less in AC500V withstand voltage test)

* About analog output

The indicated value is D/A-converted and outputted. The timing of an update is about 200 mS, and the output resolution is in the order of 1 mV.

* When not used, turn the analog output off (see instruction manual.)

Specifications (alarm output) HR-13*0 and HR-13*1

	Below lower limit	Within upper/lower limits	Above upper limit
ALM1 Upper limit	Open	Open	Close
ALM2 Lower limit	Close	Open	Open
Cable	ALMHA-1.5		

* The alarm output uses a photo MOS relay.

ON resistance (internal protection resistance 400Ω, photo MOS relay ON resistance 50Ω) Drive voltage MAX.25V

Specifications (memory function) HR-15*0

Time interval	1second,5second,10second,30second, 1minute,5minutes,10minutes,30minutes,60miinutes and manual memory
Memory capacity	19999 data

Specifications (power supply)

Model (HR-)	11*0	12*0	13*0	13*1	14*0	15*0
Batteries	4 x Alkaline AA battery (LR6)					
Battery life (continuous operation time)	About 900h	About 900h	About 600h	About 400h	About 300h	About 550h
hAnalog output (continuous output)	900h	900h	600h	About 20h	300h	550h
AC adaptor (optional) support			•	•		•

- * When the AC adapter is connected, the AC adapter has priority as the power supply.
- * When the AC adapter is connected, the power can be turned on without pressing the POWER key. Therefore, the AC adapter can be used as an external switch.
- * The HR-1500 has a built-in capacitor to maintain the clock settings. To recharge, please keep the batteries in the housing even when the product is being run by the AC adapter.
- * Lithium batteries are not used.
- * AC adaptor (optional)
Type name: AD-100-500-HR-R (100 VAC input); AD-220-500-HR-R (220 VAC input)

Specifications (accessories)

Common	Instruction manual
	Test report
	Warranty sheet
	Soft case
	Hand strap
	4 x Alkaline AA battery (LR6)
HR-13*1	Analog output cable (ANGHA-1.5)
HR-13*0 HR-13*1	Alarm output cable (ALMHA-1.5)
HR-15*0	Communication cable (AM-USB2)
	Dedicated software (AMS-300)